

# OPTIONAL CONFIGURATION



01

Open and peel back the outer flap on either side of the AVS™ harness to reveal Velcro® panel. Determine desired position (based on user preference) and place StKSS™ as shown. Refer to steps 2–4 inside this brochure to secure the StKSS™ into position.



02

Reattach outer flap of AVS™, ensuring that the flap runs over the StKSS™ as shown. Repeat for other side.



**CRYE PRECISION™**

Made in the USA with US materials. If you have any comments, questions, or suggestions regarding our products, please contact us.

P.718.246.3838  
F.718.246.3833  
info@cryeprecision.com  
www.cryeprecision.com

©2016 Crye Precision LLC. AVS™, StKSS™, Crye Precision™ and the 'CP' logo are trademarks of Crye Precision LLC.



**AVS EXTENDABLE StKSS**  
OPERATOR'S MANUAL



# FITTING/ADJUSTING VEST



01  
Locate horizontal rows of webbing on the sides of the AVS™ harness. Determine desired slot (based on user preference) and insert StKSS™ as shown. Ensure that the stiff portion of the StKSS™ passes through both rows of harness webbing.



03  
Insert StKSS™ into corresponding pocket on Low Profile Belt™ as shown.



05  
Pull lanyard out to unlock. Lift buckle to lower StKSS extension.



02  
Wrap StKSS™ strap with button snap around the back of the harness flank and over the top as shown and snap button to finish connecting StKSS™ to AVS™.  
Repeat steps 1–4 for other side.



04  
Pull down on lanyard to extend StKSS to desired length. Depress buckle to lock extension.



06  
Optional: If you would like the StKSS™ to remain connected to the belt when the AVS™ is doffed, pass black strap through top row of MOLLE on belt and connect button.