



CRYE PRECISION

STRETCH DETACHABLE FLAP



P/N: AVS-DF6
© CRYE PRECISION LLC. ALL RIGHTS RESERVED.
MADE IN THE U.S. FROM U.S. MATERIALS
WWW.CRYEPRECISION.COM

INSTALLATION INSTRUCTIONS

MOLLE ATTACHMENT



1 Flip panel over and place over front of carrier. Route all four attachment straps through webbing slots above slip pocket on front platebags. Pull straps down until top the panel is at top edge of slots




2 Open slip pocket on platebag and lay panel attachment straps down flat inside pocket.



3 Close slip pocket and flip panel over to lay flat on platebag.

RETENTION CORD ADJUSTMENT

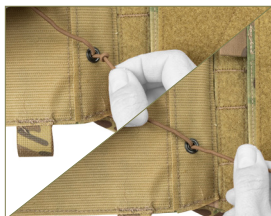


1 Untie elastic cord for desired length.



2 Secure mag in pouch.



3 Locate elastic cord hole.

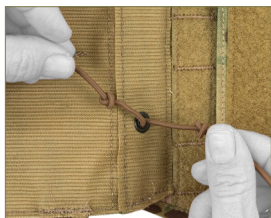

5 Re-fasten elastic cord securely.



6 Completed set-up.